

Canopy™ T1/E1 Multiplexer Application Note

MUX-AN-en
Issue 1
June 2005



Notices

The recommendations in this Application Note and in the Canopy T1/E1 Multiplexer User Guide give the installer the knowledge to optimize the configuration settings to achieve a reliable and high performance T1/E1 link.

Please refer to the Canopy System User Guide, posted at www.motorola.com/canopy for:

- Personal safety guidelines in Preventing Overexposure to RF Energy
- Important regulatory and legal notices

Trademarks, Product Names, and Service Names

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.
© Motorola, Inc. 2005.

<http://www.motorola.com/canopy>

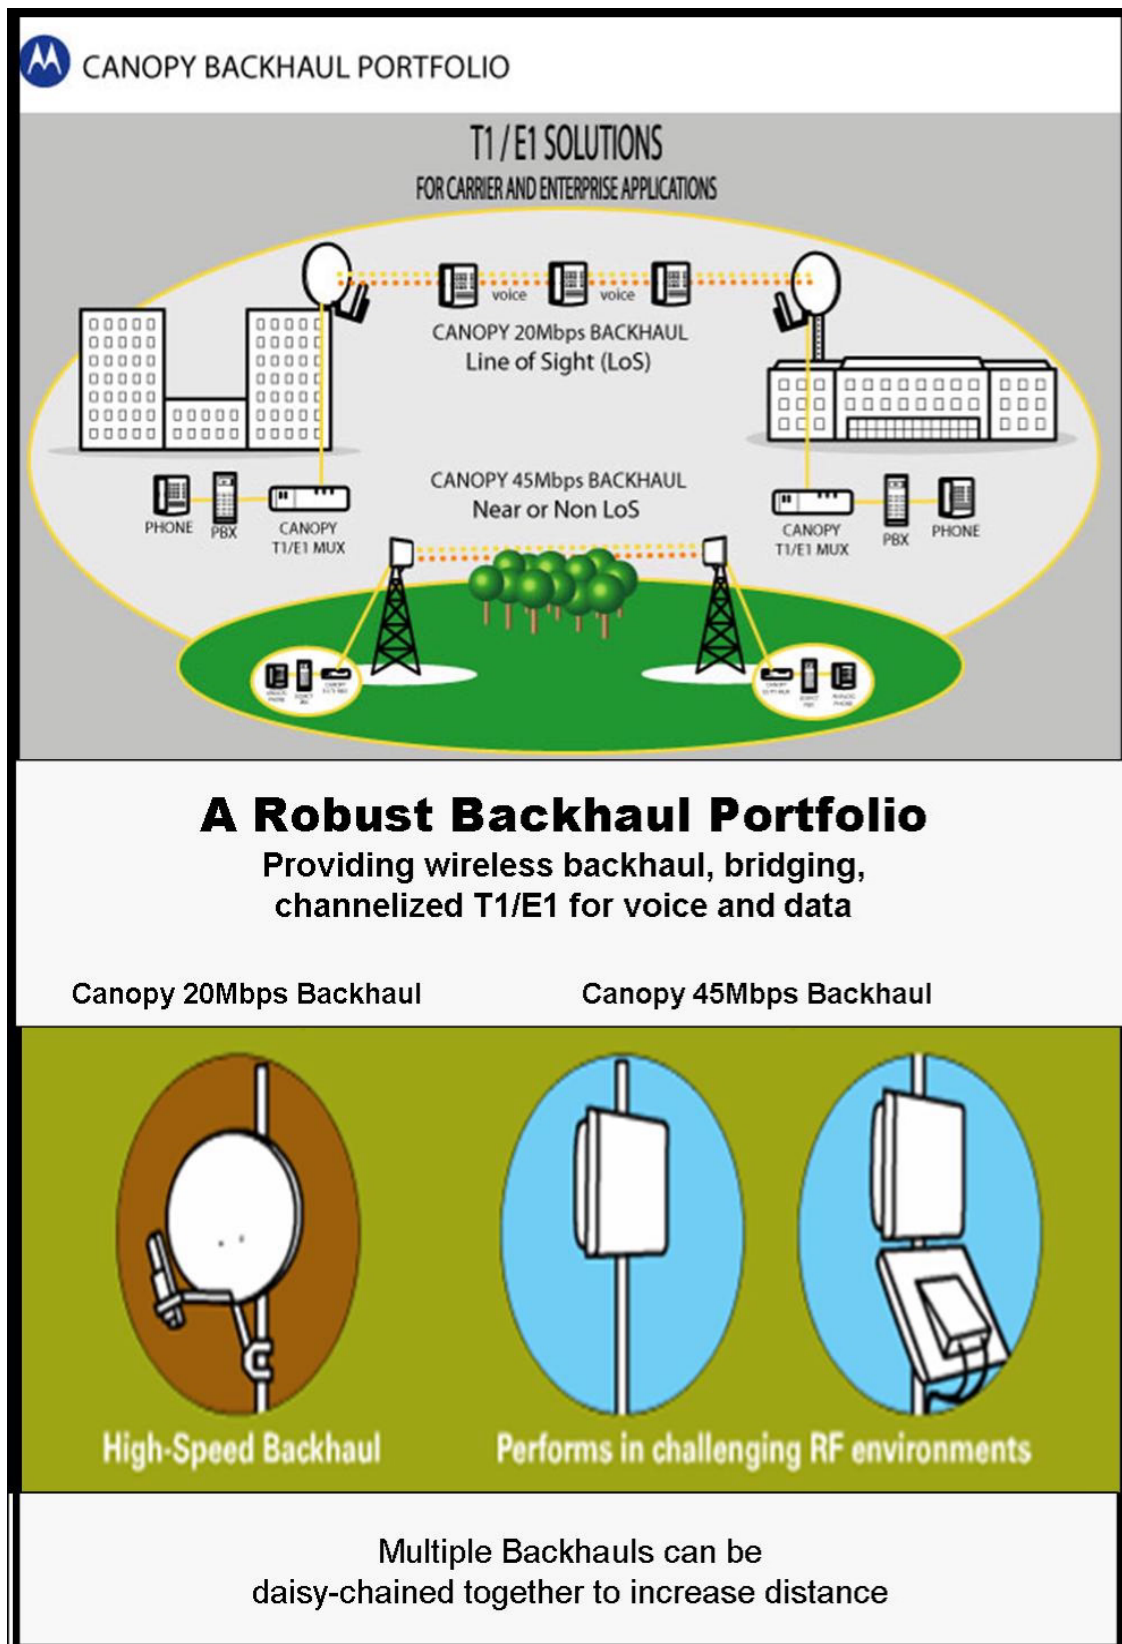


Table of Contents

Using This T1/E1 Multiplexer Application Note	5
Searching This Application Note	5
T1 / E1 Multiplexer Application Note	5
1.0 Abstract.....	5
2.0 Circuit Emulation over Canopy	5
3.0 Purpose and Goal	6
4.0 Optimum Backhaul and TMUX Configuration:.....	6
4.1 Configuration Parameters with Canopy 20Mbps Backhaul.....	6
4.2 Configuration Parameters with Canopy 45Mbps Backhaul.....	7
5.0 T1/E1 Multiplexer Configuration Guidelines	8
5.1 Canopy System Operating Margin	8
5.2 Electrical Grounding of the TMUX.....	9
5.3 TMUX and Canopy BH20 Ethernet Port Settings	9
5.4 TMUX Cable Length Setting.....	11
5.5 TMUX RJ45 to BNC Converter Cable.....	12
5.6 “Outside” T1/E1 Termination Device Clock Source Settings	13
5.7 Jitter.....	14
5.8 Canopy Passive Reflectors	14
5.9 Ramifications of Enabling AES Channel Encryption.....	14
5.10 Enabling Canopy BH20 Hardware Scheduling	14
5.11 T1/E1 Cabling.....	14
6.0 Summary and Conclusion.....	15
Additional Resources.....	16

Using This T1/E1 Multiplexer Application Note

This document should be used with following Canopy™ User Guides*:

- Canopy 45Mbps Backhaul User Guide
- Canopy T1/E1 Multiplexer User Guide
- Canopy System User Guide

* Important: Visit the Canopy Support Web Site to download the latest Canopy software and Canopy User Guides. http://www.canopywireless.com/support_home.php

Searching This Application Note

To search this document, look in

- the Table of Contents for the topic.
- The Adobe Reader® search capability for keywords that apply.¹
- Use the page numbers at the bottom of the screen and in the thumbnails. These match the page numbers in the Table of Contents.
- Use the **Edit→Search** command (or **Ctrl+F**) to find a word or phrase.

T1 / E1 Multiplexer Application Note

1.0 Abstract

Circuit emulation is a challenging application for any packet-based infrastructure, and even more so in a Time Division Duplex (that is, half duplex) operational mode. Canopy supports, with external adjunct “terminal multiplexers” (TMUXs), the circuit emulation application. Understanding configuration issues and maintaining realistic expectations is essential. This guide addresses the configuration issues, outlines the radio conditions necessary for successful circuit emulation, and sets expectations appropriate to this demanding task.

2.0 Circuit Emulation over Canopy

Canopy supports circuit emulation via external TMUX devices that are paired at either end of a backhaul link. Apart from the obvious need to configure the TMUX and the associated Canopy network elements correctly, the success of the circuit emulation depends upon how radio conditions impact the circuit emulation application.

Potential applications for the T1/E1 Multiplexer include:

- Delivering T1/E1 replacement
- Implementation of wireless PBX networking
- Establishment of cellular backhaul applications
- Providing homeland security backup/emergency voice networks

Each TMUX device converts the constant bit rate circuit into a constant sequence of packets in a flow. These identically sized packets are launched at a constant time interval to be transported to the other TMUX across the Canopy “air link”.

¹ Reader is a registered trademark of Adobe Systems, Incorporated.

3.0 Purpose and Goal

This document describes proper setup and configuration of both Canopy backhaul elements and the TMUX devices.

Additionally this document illustrates the importance of maintaining reasonable expectations for the demanding circuit emulation application over a packet infrastructure. Circuit emulation can never be as good as a “real circuit.” Traditional circuit performance metrics can only approach that of a terrestrial-based circuit from a telephony common carrier.

4.0 Optimum Backhaul and TMUX Configuration:

Circuit emulation, the process of converting PBX traffic to wireless Ethernet and back, requires the installer to follow documented best practices learned from various lab testing, field trials and customer installations to achieve a bit error rate (BER) equal to or better than 10^{-6} .

This section provides two quick start diagrams with the Canopy configuration parameters* that must be set in order to achieve an optimum configuration. This section is followed by “Optimum Configuration Details” that further details using the Canopy System for T1/E1 replacement.

4.1 Configuration Parameters with Canopy 20Mbps Backhaul

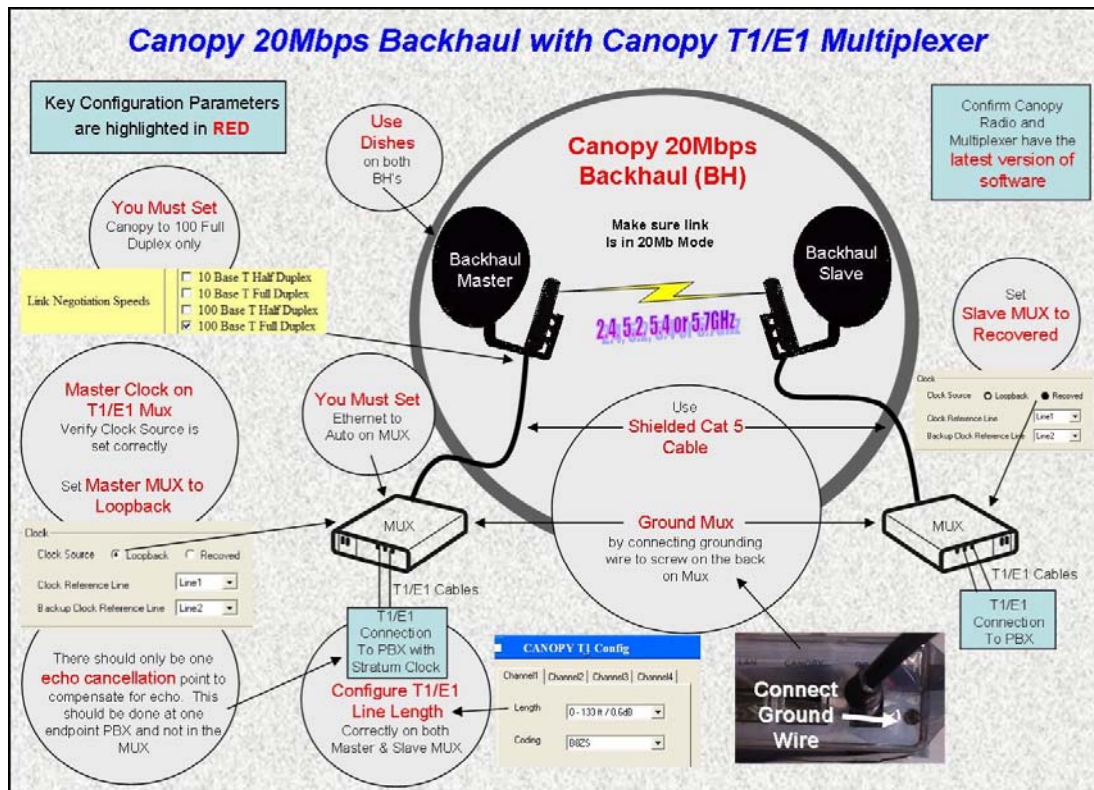


Figure 1: Configuration Summary for Canopy 20Mbps Backhaul

* Important: Visit the Canopy Support Web Site to download the latest Canopy software and Canopy User Guides. http://www.canopywireless.com/support_home.php

4.2 Configuration Parameters with Canopy 45Mbps Backhaul

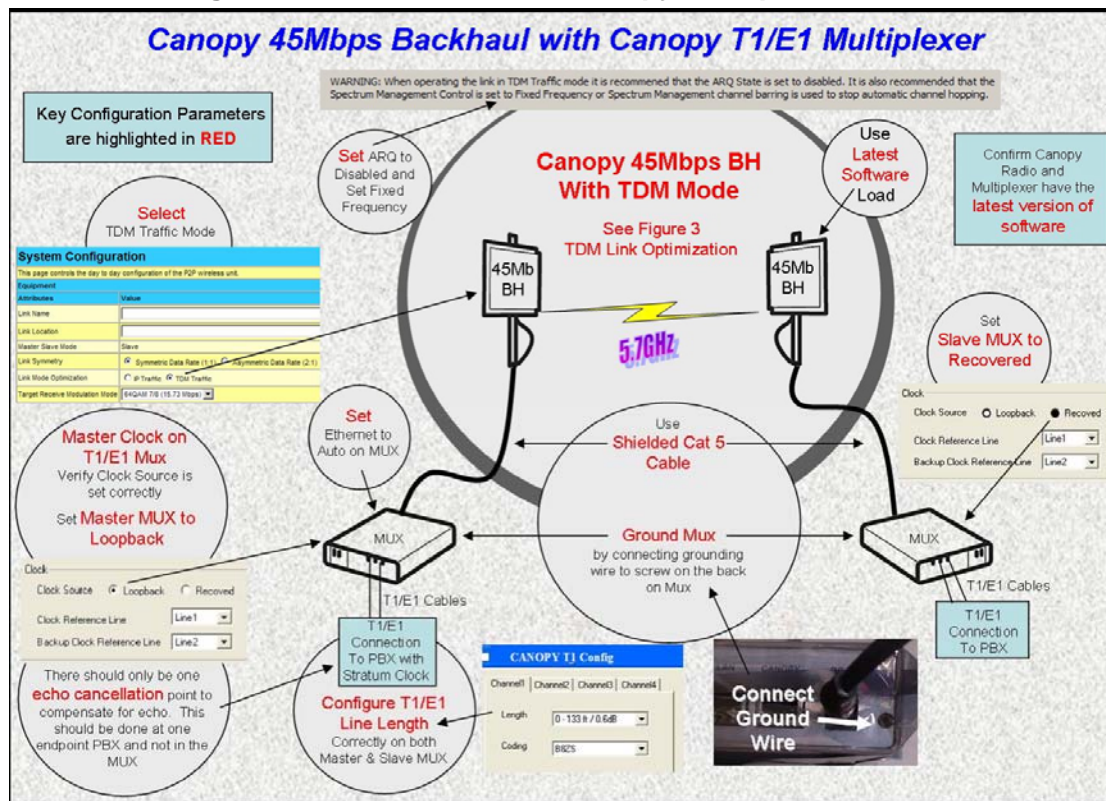


Figure 2: Configuration Summary for Canopy 45Mbps Backhaul

Canopy 45Mbps Backhaul TDM Link Mode

45Mb BH TDM Link Optimization Mode

- Use this mode when carrying fixed-rate (TDMoIP) traffic
- Radio minimizes packet loss in this mode by preferring lower rate, high protection modulation modes over higher rate modes
- TDM Mode optimizes link by using a new set of Adaptive Modulation margins which cause the radio to switch to lower modes at the first sign of variation in the radio path. This reduces the probability of codeword errors (and hence packet loss).
- To minimize latency, the TDM traffic should be prioritized by setting the 802.11p VLAN ID and priority bits. Any other IP “side” traffic should be unprioritized.
- Optimum settings should be found by experimentation as peak latency is caused by various ranges and modulation modes which are found in the below table.

Mode	0-5km		0-100km	
	Load (pkts/sec)	Max. latency (ms)	Load (pkts/sec)	Max. latency (ms)
QPSK 1/2	1650	11.5	1380	15.0
16QAM 1/2	4260	8.0	2800	11.0
64QAM 7/8	11400	9.6	5400	9.6

45Mb BH

45Mb BH

Figure 3: Description of Canopy 45Mbps Backhaul TDM Mode

5.0 T1/E1 Multiplexer Configuration Guidelines

These guidelines apply to the 20Mbps Backhaul configuration.

- The Canopy 20Mbps Backhaul operating margin should be *at least* 3dB above receiver sensitivity; this is a received signal strength of better than -76dB.
- If Canopy 20Mbps Backhaul AES encryption (Release 7.2) is employed, be aware that doing so will drop the T1/E1 circuit once every 24 hours for the setup of a new encryption key.
- Enable Canopy 20Mbps Backhaul Hardware Scheduler on both units. (Release 7.2)
- Be aware of the difference between RJ45 Ethernet cable and RJ45 T1/E1 cable; these cable types are not interchangeable.
- Ground (earth) the TMUX chassis units.
- Set the TMUX Ethernet port configuration to “*auto-negotiation on.*”
- Set the Canopy BH20 Ethernet configuration to 100 Mbps Full Duplex.
- Set the TMUX units’ T1/E1 cable lengths appropriately.
- If “outside” E1 devices employ 75ohm BNC ports, use a high quality conversion cable to derive a 120ohm RJ45 E1 equivalent for the TMUX.
- Know the T1/E1 device configuration of the “outside” T1/E1 terminations, in particular whether they are synchronized by Stratum clock or expect synchronization from the T1/E1 line (See Section 5.6):
 - Set the TMUX port facing a T1/E1 device having Stratum clock synchronization to “*loop timing*”; this could be one or both TMUXs; these are typically Central Office devices.
 - Set the TMUX port facing a T1/E1 device expecting to receive synchronization to “*recovered timing*”; this is typically a CPE device; the other TMUX unit should be set to “*loop timing*”.
- Always install Canopy’s passive reflectors for better signal strength and interference rejection.

5.1 Canopy System Operating Margin

A statistic concerning the successful operation of any Canopy system, whether in the TMUX circuit emulation application context or not, is System Operating Margin (SOM). By definition SOM is the difference in signal strength received and the receiver’s sensitivity, expressed in dBm (decibels referenced per 1 milliwatt).

Note that a negative dBm value is a signal less than 1mW, and a positive value means a signal stronger than 1mW. In Figure 4 the -96dBm is extremely weak, and in fact indicates no received signal at all, the circumstance of the “expand stats” screen capture shown.

Note the Radio Transmit Gain setting is also shown; this is the power being sent into the Canopy antenna. All Canopy units produce +23dBm (or 200mW). The integrated antenna adds 7dB, and if the passive reflector is used it adds 18dB (or 8dB if 2.4GHz). This implies that a Canopy BH20 unit transmits 23+7+18 or 48dB into “space”. The intermediate “Free Space Loss” (FSL) is dependent upon frequency and range, and when subtracted from 48dB (in this example) results in the Radio Power Level value displayed. Other factors may further reduce actual Radio Power Level.

Subscriber Modem Stats	
Session Status	SCANNING
Registered AP	n/a
RSSI	0
Jitter	0
Air Delay	0 (approximately 0.00 miles (0 feet))
Radio Slicing Value	573 (decimal)
Radio Transmit Gain Setting	23 (decimal)
Radio Power Level	-96 dBm

Figure 4. BH20 RSSI and Jitter Display indicating no signal.

In actual operation the Canopy BH20 unit will display a RSSI value above -79dBm.

Motorola strongly recommends the use of passive reflectors at both ends as their narrow beam characteristic means less multipath signal and better “rejection” of whatever actual multipath signal there is.

5.2 Electrical Grounding of the TMUX

As stated in the Canopy T1/E1 Multiplexer User Guide, proper grounding (or “earthing”) is essential for reliable circuit application. One of the Phillips screws on the back of the TMUX unit should be loosened and connected to a sufficiently large gauge grounding wire. This grounding should include any T1/E1 equipment as well, so the T1/E1 electrical signal may be properly interpreted by the TMUX unit. Use local practices or refer to standard electrical code.

5.3 TMUX and Canopy BH20 Ethernet Port Settings

The link between the TMUX and its associated Canopy backhaul unit is a 100Mbps full duplex Ethernet link. No other Ethernet operational mode is allowed due to the demanding aspects of circuit emulation.

Ethernet technology defines an “auto negotiation” process such that two Ethernet devices may dynamically and automatically “agree” to operate in either 10Mbps half duplex, 10Mbps full duplex, 100Mbps half duplex, or 100Mbps full duplex. While this process is defined by the Clause 28 of the 802.3u Fast Ethernet supplement to the IEEE 802.3 standard, in practice not all devices conform. Consequently a device having this capability does not mean that all Ethernet interfaces will properly auto-negotiate.

Canopy and TMUX units do not auto-negotiate *with each other*, but with manual configuration the required 100 Mbps full duplex operation can be guaranteed. If this setting is not properly configured the circuit application will not operate properly, resulting in T1/E1 circuit errors. This “problem” is thought to be responsible for the majority of the field problems experienced with circuit emulation over Canopy.

The Canopy T1/E1 Multiplexer User Guide, September 2004, section 2.4.5 correctly states the command line Ethernet configuration entry should be:

Canopy port auto-negotiation is: on

In section 2.5.5 for the GUI configuration of Ethernet, the same manual correctly states:

Follow these steps to configure the Ethernet ports using the T1/E1 GUI Application

1. From the Main Menu, select the pull-down menu Config→Ethernet. **RESULT:** The Ethernet Configuration dialogue box opens.
2. Indicate the appropriate choices by clicking on the appropriate radio buttons. **NOTE:** If you select Auto Negotiation Off, the Ethernet port will be forced to 100 Mbps full duplex.
3. When the Ethernet configuration is complete, click OK.

This GUI configuration is shown in Figure 5

“The Ethernet physical layer auto-negotiation must be explicitly set to ‘on’ in the TMUX configuration setting, and explicitly ‘100 Base T Full Duplex’ only in the Canopy unit. If this is not done the TMUX and Canopy BH unit will not properly communicate and will produce unacceptable circuit emulation.”

Setting the Canopy unit to 100 Mbps Full Duplex mode is done by **unchecking** the three other Ethernet “Link Negotiation Speeds” boxes, as shown in Figure 6. If more than one box alternative is checked the Canopy unit enters into auto-negotiation mode that will result in improper Ethernet communication with the TMUX, and consequently poor T1/E1 performance. Again, only the “100 Base T Full Duplex” box should be checked.

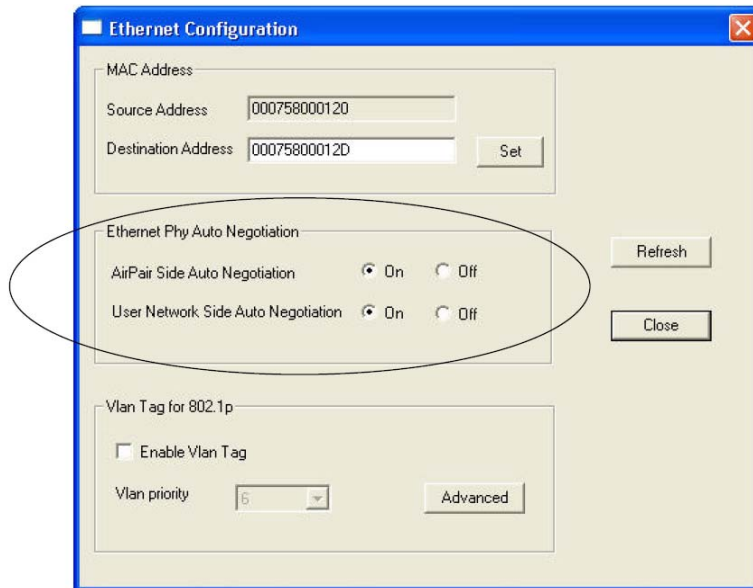


Figure 5. TMUX GUI Ethernet port configuration

Device Information	
5.7GHz — BackHaul — Timing Master — 20 Mbit — 0a-00-3e-f1-55-46	
Parameter	Value
Timing Mode	<input checked="" type="radio"/> Timing Master <input type="radio"/> Timing Slave
Modulation Scheme	<input type="radio"/> 10 Mbits/Second (2 Level) <input checked="" type="radio"/> 20 Mbits/Second (4 Level)
Sync Input	<input type="radio"/> Sync to Received Signal (Power Port) <input type="radio"/> Sync to Received Signal (Timing Port) <input type="radio"/> Generate Sync Signal
Link Negotiation Speeds	<input type="checkbox"/> 10 Base T Half Duplex <input type="checkbox"/> 10 Base T Full Duplex <input type="checkbox"/> 100 Base T Half Duplex <input checked="" type="checkbox"/> 100 Base T Full Duplex
RF Frequency Carrier	5765
Downlink Data	50 %
Color Code	0 (0—254)
Display-Only Access	Password: <input type="text"/> No Password Password: <input type="text"/>

Figure 6. Setting the Canopy unit to 100Mbps Full Duplex mode

5.4 TMUX Cable Length Setting

The TMUX receives from and transmits into the RJ45 T1/E1 port. To accomplish this properly it must set its Rx sensitivity and Tx power level appropriately. Thus the T1/E1 cable length must be classified into one of the four length settings specified.

Canopy T1/E1 Mux Configuration

Canopy T1/E1 Mux Port Type: ☒ E1 ☐ T1

Clock: Clock Source ☐ Loopback ☒ Recovered
 Master Clock Reference Line: Line1
 Secondary Clock Reference Line: Line2

Channel1 Channel2 Channel3 Channel4

Length:
 Coding: HD83

Enabled T1/E1 Ports:
☒ Port 1
☒ Port 2
☒ Port 3
☒ Port 4

Close Refresh

Figure 7. TMUX Length, Coding, and Clocking Configuration.

5.5 TMUX RJ45 to BNC Converter Cable

If the E1 devices to the “outside” of the TMUX units does not have RJ45 (a.k.a RJ48C in the telephony industry) port capability then a “conversion cable” is needed. In this case, the E1 device has BNC 75ohm ports, one for Tx and one for Rx.

It is very important to note that the T1/E1 RJ45 terminated cable is not identical to Ethernet 100 Mbps full duplex RJ45 terminated cable; the pinouts are different (See Section 6.11 in the Canopy T1/E1 Multiplexer User Guide).

Such conversion cables are available from a number of vendors. Motorola recommends that high quality cable be employed in this circuit emulation application context.

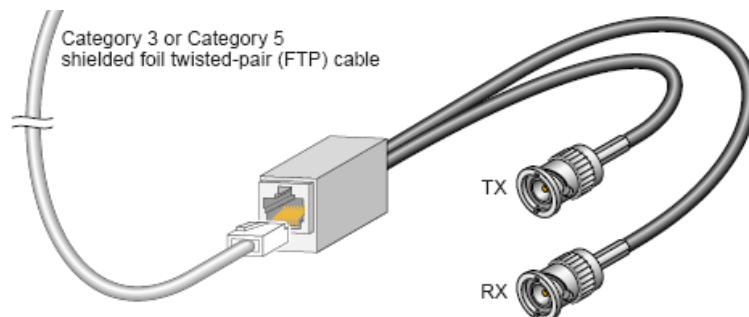


Figure 8. E1 BNC to RJ45/RJ48C Converter

Figure 8 illustrates a typical E1 BNC to RJ45 converter cable. Note that the RJ45 part of the cable length, in the instance, is stipulated as being “shielded foil” and Category 5.

There is a means of setting the converter cable's "balun" to optionally ground (earth) the RJ45 unused pins and shield. Motorola recommends that these unused pins and shield be "grounded", which is usually the factory default setting.

This leaves the difficulty of determining the "length" of a converter cable in the sense of the TMUX configuration described in Section 5.4 above. Motorola has no explicit recommendation in this regard, but suggests setting the length such that E1 performance is maximized.

5.6 "Outside" T1/E1 Termination Device Clock Source Settings

In addition to knowing the "outside" T1/E1 device port modulation and framing type being used it is important to know about that device's "clock source". The highest quality clocks are called Stratum clocks. This clocking reference is attached to various circuit devices via what is termed a "BITS" clock (Building Integrated Timing Systems). Such devices are "precise enough" that other circuit devices, those without stratum clock input, can use their T1/E1 circuit connection as a clock source.

Circuit devices on customer premises, because they do not have BITS availability, often use such a central-office clocked T1/E1 as a reference clock source.

Consequently, it is important for the Canopy TMUX operator to know which "outside" T1/E1 terminations can provide "clock" and which must derive "clock" from the TMUX end.

The Canopy T1/E1 Multiplexer User Guide defines these two modes of operation:

- **Loopback** mode: the T1/E1 Transmit clock (transmit from the Canopy T1/E1 Multiplexer) is derived from the incoming Receive clock on the T1/E1.
 - **Recovered** mode: the T1/E1 Transmit clock (transmit from the Canopy T1/E1 Multiplexer) is derived from the far-end device transmit clock (the far end Canopy T1/E1 Multiplexer Receive clock). In this mode, a buffer is used to accommodate bursts of Ethernet traffic. The buffer is, on average, maintained at a constant level. As the buffer fills, the Transmit clock increases in frequency to avoid overflow. As the buffer empties, the Transmit clock decreases in frequency in order to maintain a constant level. Figure 7 above illustrates the TMUX GUI screen for setting these parameters and assigning them to particular T1/E1 TMUX ports.
- Set the TMUX port facing a T1/E1 device having Stratum clock synchronization to "*loop timing*"; this could be one or both TMUXs; these connections typically face Central Office-based devices.
 - Set the TMUX port facing a T1/E1 device expecting to receive synchronization to "*derived timing*"; this is typically a CPE device; the other TMUX unit should be set to "*loop timing*".

Note the circumstance. A TMUX in "loop" mode receives clocking on a T1/E1; this could be one or both TMUXs. A TMUX in "recovered" mode receives timing from across the Canopy radio link, and employs that timing in the T1/E1 framing sense toward whatever CPE T1/E1 devices on the far end.

In particular note that if the TMUXs are both configured to "recovered" clock then neither is obtaining clock from the "outside" T1/E1 devices. This means that the TMUXs are forced to operate independently of a precise clock source, meaning they operate on their built-in TMUX clock that is not stratum compliant. Motorola recommends avoiding this operation scenario by configuring the "Central Office end" TMUX to "loop" and the other TMUX to "recovered".

5.7 Jitter

Following is an explanation of *packet jitter*:

- The sent packet sequence has a constant time interval between adjacent packets.
- The packet sequence arrives at the other TMUX with a variable time interval between the same adjacent packets.
- This effect, termed “packet jitter”, is introduced by the statistical nature of packet transport, in which packets are queued onto an outgoing link before being processed.

For the usual data application this is of no concern, but management of jitter is essential for good circuit emulation.

A TMUX device resolves “packet jitter” by storing milliseconds of circuit payload, typically 20ms, in its “payout buffer.” Sometimes this is called the “de-jitter buffer.” Thus, the circuit emulation application deliberately inserts delay such that, should the subsequent time interval between adjacent packets be lengthened to almost 20ms, the TMUX “payout buffer” absorbs this variation, and the application continues successfully.

5.8 Canopy Passive Reflectors

In radio, jitter is a measure of the quality of the signal (whereas dBm is a measure of the power of the signal). Interference, either from multipathing, other Canopy modules, or external interference will all increase jitter.

Passive reflectors provide an additional 18dBi gain on top of the usual integrated antenna (for the 2.4GHz BH20 the gain is only 8dBi because of its increased wavelength). Not only does this increase the effective range, it also narrows the radio beam width from about 60° to about 6°. Consequently, while alignment requires more precision, the passive reflector complex effectively “rejects” much multipath signal reception, reducing Jitter.

Motorola strongly recommends that passive reflectors be employed at both ends of any backhaul context, and in particular for the circuit emulation application context.

5.9 Ramifications of Enabling AES Channel Encryption

AES Channel Encryption is significant to the TMUX circuit emulation application. AES mandates an encryption key update once every 24 hours. Thus, enabling AES in the circuit emulation application context will necessarily cause a circuit interruption as the Canopy units exchange the protocol handshake necessary for placing a new encryption key in place.

5.10 Enabling Canopy BH20 Hardware Scheduling

Starting in Release 7.2 the Canopy BH supports the Hardware Scheduling feature. Laboratory testing indicates that HW Scheduling improves the circuit emulation application measurably. Motorola recommends that BH20 units be updated to Release 7.2 and HW Scheduling enabled.

The reason HW Scheduling operation is superior to the original SW Scheduling is that a fragment ARQ retransmission is accomplished much quicker, thereby reducing the interpacket jitter and so not stressing the TMUX payout algorithm as much.

5.11 T1/E1 Cabling

T1/E1 Cable nomenclature is not uniformly observed, and the differences from Ethernet cable often not appreciated. In that spirit a review is provided.

In the context of T1/E1 the use of “RJ45” is widespread but probably inappropriate. The telephony industry terms this jack as a “RJ48C” even though it is physically identical. As Figure 9 illustrates the Tx and Rx pairs (often termed “tip” and “ring”) and pinouts; note they are in a crossover arrangement. Crossover means that the TX pair at one cable end becomes the Rx pair at the other cable end.

RJ-45 Pin(s)	Function
1 and 2	TX pair
3	TX shield
4 and 5	RX pair
6	RX shield

Figure 9. T1/E1 RJ45/RJ48C Pinouts

Contrast this circumstance to Ethernet RJ45 cable pinouts. Ethernet cable comes as “straight through” or “crossover” versions (typically Ethernet ports “autosense” and work with either version). Clearly Ethernet straight through can not work in the T1/E1 cable environment. Figure 10 below indicates the Ethernet crossover cable pinouts. Note that pins 1 and 2 map to pins 3 and 6 respectively, and visa-versa. The remaining pins 4, 5, 7, and 8 are often used to carry power, as indeed is the case for Canopy.

Pin 1 →	white / orange	← Pin 3
Pin 2 →	orange	← Pin 6
Pin 3 →	white / green	← Pin 1
Pin 4 →	blue	← Pin 4
Pin 5 →	white / blue	← Pin 5
Pin 6 →	green	← Pin 2
Pin 7 →	white / brown	← Pin 7
Pin 8 →	brown	← Pin 8

Figure 10. Ethernet Crossover Pinouts

The important point is that connecting the TMUX T1/E1 ports to telephony devices like a PBX, ADM, DSC, or IP router T1/E1 requires special T1/E1 RJ48C cable. Ethernet cable will not work. On the other hand, between the TMUX “Canopy Port” and a Canopy BHRF20 unit an Ethernet RJ45 cable must be used (either crossover or straight through).

6.0 Summary and Conclusion

Laboratory testing shows that, when properly configured, the Canopy TMUX transparent transport of T1/E1 is consistent with industry circuit standards of performance. But in any radio environment transient conditions may temporarily cause unexpected and “random” packet delays that, if sufficient to underflow a TMUX playout buffer, result in unacceptable circuit performance. Additionally the challenges of Canopy’s half-duplex operation and additional delays for packet payload accumulation may result in less than common carrier-grade circuit performance on occasion. Consequently, it is necessary to have realistic expectations when employing Canopy for circuit emulation.

Laboratory testing indicates that, when the Canopy TMUX is configured as described, circuit emulation at the BER 10^{-6} level is sustainable indefinitely. This is sufficient for voice access, but slightly less than common carrier terrestrial performance goals.

Additional Resources

Canopy provides two additional resources:

- Canopy User Community at <http://www.canopywireless.com/community>.
This resource facilitates communication with other users and with authorized Canopy experts. Available forums include General Discussion, Network Monitoring Tools, and Suggestions.
- Canopy Knowledge Base at <http://www.canopywireless.com/kbase>.
This resource facilitates exploration and searches, provides recommendations, and describes tools. Available categories include
 - General (Answers to general questions provide an overview of the Canopy system.)
 - Product Alerts
 - Helpful Hints
 - FAQs (frequently asked questions)
 - Hardware Support
 - Software Support
 - Tools

Sending Feedback

We welcome your feedback on Canopy system documentation. This includes feedback on the structure, content, accuracy, or completeness of our documents, and any other comments you have. Please send your comments to technical-documentation@canopywireless.com.